

Cable-Extension Position Transducer

RS232 Data Communication
Ranges: 0-600 to 0-1700 inches
Industrial Grade

PT9232 ^{<Extended Range>}


Specification Summary:

GENERAL
 Full Stroke Ranges 0-600 to 0-1700 inches
 Electrical Interface RS232
 Format HEX
 Accuracy $\pm 0.10\%$ full stroke
 Repeatability $\pm 0.02\%$ full stroke
 Resolution $\pm 0.003\%$ full stroke
 Measuring Cable nylon-coated stainless steel
 Enclosure Material powder-painted aluminum or stainless steel
 Sensor plastic-hybrid precision potentiometer
 Potentiometer Cycle Life 250,000 cycles *before signal degradation may occur*
 Maximum Retraction Acceleration *see ordering information*
 Maximum Velocity *see ordering information*
 Weight, Aluminum (Stainless Steel) Enclosure8 lbs. (16 lbs.), max.

ELECTRICAL
 Input Voltage 9...22 VDC
 Input Current 40 mA
 Baud Rate9600 (selectable to 38.4K)
 Update Rate 32msec

ENVIRONMENTAL
 Environmental Suitability NEMA 4X/6, IP 67
 Operating Temperature -40° to 200°F (-40° to 90°C)
 Vibration up to 10 G's to 2000 Hz maximum


Outline Drawing

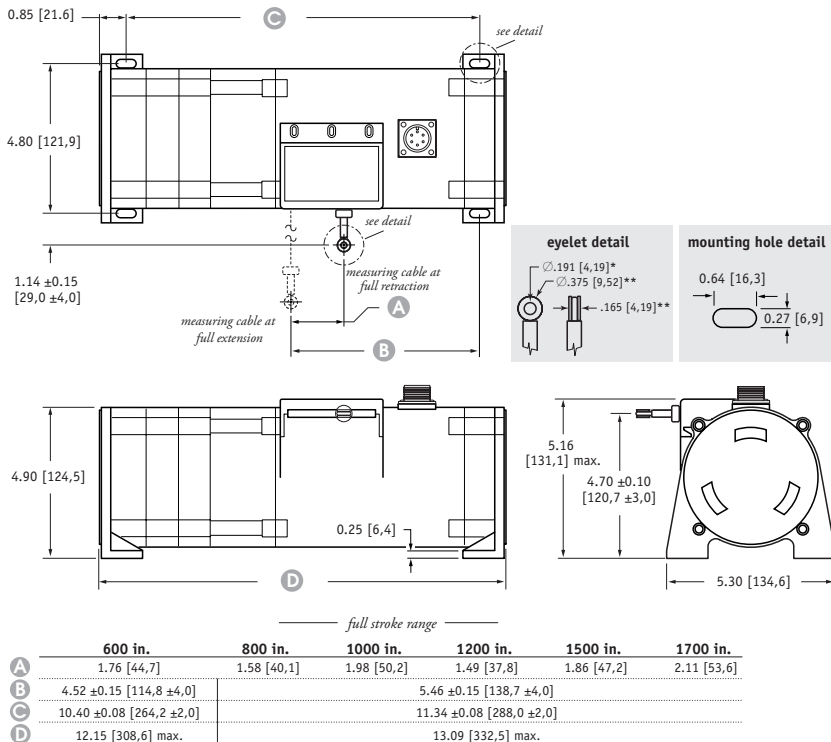

The PT9232 delivers position feedback via RS232 serial communication to your data acquisition or controller system. The PT9232 sends a raw 16-bit count from 0000H to FFFFH. Additionally this device can be set to continuously send data or send data only when polled.

As the internal position sensing element is a precision potentiometer, this transducer maintains current accurate position even during power loss and does not need to be reset to a "home" position.

Output Signal

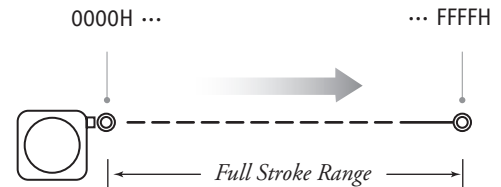



DIMENSIONS ARE IN INCHES [MM]
 tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

* tolerance = +.005 -.001 [+13 -.03]
 ** tolerance = +.005 -.005 [+13 -.13]

CeleSCO Transducer Products, Inc.
 20630 Plummer Street • Chatsworth, CA 91311
 tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

celesco
 celesco.com • info@celesco.com

I/O Format:

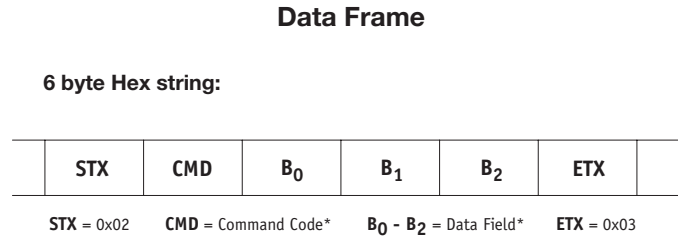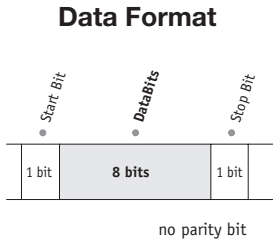

*-see below

Important! All communications to/from the transducer are in **HEX!**

User Commands:

Description	User Command				Sensor Response			
	<CMD>	<B ₀ >	<B ₁ >	<B ₂ >	<CMD>	<B ₀ >	<B ₁ >	<B ₂ >
Get Sensor Info	0x05	0x00	0x00	0x00	0x05	version ⁽⁴⁾	date ⁽⁵⁾	date ⁽⁵⁾
Get Serial Number	0x15	0x00	0x00	0x00	0x15	serial number ⁽³⁾		
Start Continuous Data	0x25	0x00	0x00	0x00	0x25	0x00	0x00	0x00
Stop Continuous Data	0x35	0x00	0x00	0x00	0x35	0x00	0x00	0x00
Get Position Data	0x45	0x00	0x00	0x00	0x45	CMC ⁽¹⁾	CMC ⁽¹⁾	status ⁽²⁾

(1) CMC - Current Measurement Count (Position)

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable.

The CMC is a 16-bit value that occupies the first two bytes (B₀ and B₁) of the data field. B₀ is the MSB (most significant byte) and B₁ is the LSB (least significant byte).

The CMC starts at 0000H with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at FFFFH. This holds true for all ranges.

(2) Status

The status byte is used as a flag to indicate the validity of the position signal that the internal electronics receives from the potentiometer.

Flags are as follows:
0x00 = GREEN, 0x55 = YELLOW, 0xAA = RED

A "green" flag shows everything OK. A "yellow" or "red" flag indicates that the sensor has either been extended beyond its range or that there is a problem with the potentiometer.

(3) Serial Number

Each sensor has its own unique serial number. This information can be retrieved by sending the sensor the "Get Serial Number" command.

The serial number is a 3 byte value from which ranges from 0 to 9999999 (decimal).

(4) Version

This is a single byte value (0-255 decimal) which indicates the currently installed firmware version of the sensor.

(5) Date

This is a 2 byte value showing the date of currently installed firmware. This value ranges from 01011 - 12319 (decimal). Format is MMDDY. While the month and day are expressed as two digit numbers the year is expressed in a single digit only.

Example: 08054 = August 5, 2004


Baud Rate

The baud rate can be set using switches 7 & 8 on the 8-pole DIP switch found on the rs232 controller board located inside the transducer.

DIP-7	DIP-8	baud rate
0	0	9600
1	0	19200
0	1	38400
1	1	9600



RS232 Controller Board and DIP Switch Location

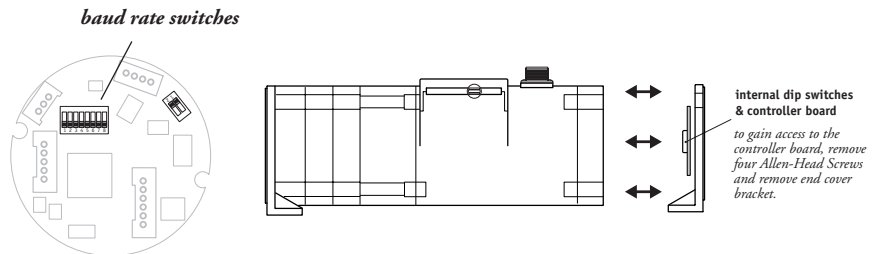

Ordering Information:

Model Number:

PT9232 - - - -
order code: **R** **A** **B** **C**

Sample Model Number:

PT9232 - 1200 - AL - FR - M6

- R** range: 1200 inches
- A** enclosure: aluminum
- B** cable exit: front (horizontal)
- C** electrical connection: 6-pin plastic connector

Full Stroke Range:

R <i>order code:</i>	600	800	1000	1200	1500	1700
full stroke range, min:	600 in.	800 in.	1000 in.	1200 in.	1500 in.	1700 in.
cable tension (30%):	25 oz.	25 oz.	24 oz.	24 oz.	23 oz.	23 oz.
measuring cable:	.034-in. dia. nylon-coated stainless	.019-in. dia. nylon-coated stainless	.019-in. dia. nylon-coated stainless	.019-in. dia. nylon-coated stainless	.014-in. dia. nylon-coated stainless	.014-in. dia. nylon-coated stainless

Enclosure Material:

A <i>order code:</i>	AL	SS
enclosure material:	powder-painted aluminum	303 stainless steel
max. acceleration:	1G	.33G
max. velocity:	60 inches/sec.	20 inches/sec.

Cable Exit:

B *order code:*

FR	UP	BK	DN
front	top	back	down

Electrical Connection:

C *order code:*

M6	C25																																			
6-pin plastic connector with mating plug IP 67, NEMA 6, NEMA 4X (stainless enclosure only)	25-ft. instrumentation cable 24 AWG, shielded IP 67, NEMA 6																																			
.30 - .39 in. [8 - 10 mm] cable dia. 16 AWG max conductor size connector: MS3102E-145-6P mating plug: MS3106E-145-6S	25 ft. x 0.2-in. dia. [7,5 M x 5 mm dia.] 24 AWG, shielded																																			
<table border="0"> <tr> <td></td> <td>pin</td> <td>signal</td> </tr> <tr> <td>A</td> <td>A</td> <td>9...22 VDC</td> </tr> <tr> <td>B</td> <td>B</td> <td>common</td> </tr> <tr> <td>C</td> <td>C</td> <td>Transmitted Data</td> </tr> <tr> <td>D</td> <td>D</td> <td>Received Data</td> </tr> <tr> <td>E</td> <td>E</td> <td>common</td> </tr> <tr> <td>F</td> <td>F</td> <td>common</td> </tr> </table>		pin	signal	A	A	9...22 VDC	B	B	common	C	C	Transmitted Data	D	D	Received Data	E	E	common	F	F	common	<table border="0"> <tr> <td>color code</td> <td>signal</td> </tr> <tr> <td>Red</td> <td>9...22 VDC</td> </tr> <tr> <td>Black</td> <td>common</td> </tr> <tr> <td>White</td> <td>—</td> </tr> <tr> <td>Green</td> <td>Transmitted Data</td> </tr> <tr> <td>Blue</td> <td>Received Data</td> </tr> <tr> <td>Brown</td> <td>common</td> </tr> </table>	color code	signal	Red	9...22 VDC	Black	common	White	—	Green	Transmitted Data	Blue	Received Data	Brown	common
	pin	signal																																		
A	A	9...22 VDC																																		
B	B	common																																		
C	C	Transmitted Data																																		
D	D	Received Data																																		
E	E	common																																		
F	F	common																																		
color code	signal																																			
Red	9...22 VDC																																			
Black	common																																			
White	—																																			
Green	Transmitted Data																																			
Blue	Received Data																																			
Brown	common																																			

version: 4.0 last updated: July 11, 2008